





**ANCHOR™**  
BUILD SOMETHING BEAUTIFUL

Anchor Wall Engineering, LLC  
5959 Baker Road, Suite 390  
Minnetonka, MN 55345

These graphic representations are intended for preliminary design purposes only and are not to be used for construction without the signature of a registered professional engineer.

©2008 Anchor Wall Engineering, LLC  
® and ™ Anchor Wall Systems, Inc.


SAW-CUT AS REQUIRED TO  
CONSTRUCT 90-DEGREE  
MITERED CORNER

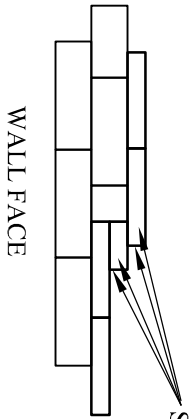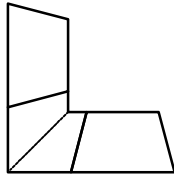


WALL FACE

SPLIT FACE AND END

OUTSIDE CURVE

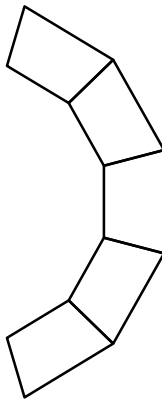

INSIDE CURVE

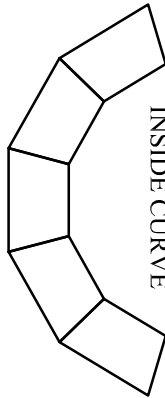

TOP



1. Always start capping wall from the lowest elevation.
2. Lay out caps prior to using adhesive.
3. Alternate short and long cap faces every other cap to achieve a straight row of caps.
4. Cut caps to fit. Various combinations of long and short cap faces will be necessary for radii greater than the minimum.
5. Use exterior-grade construction adhesive to secure caps.

Drawn By: AWE

Date: 3/18/2008

Scale: None

Drawing Title:

Highland Stone® Retaining Walls  
Cap Block Details

Project Information:

Typical Retaining Wall Details  
www.anchorwall.com